


# Amsterdam

Design by BoConcept


Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

## Examples

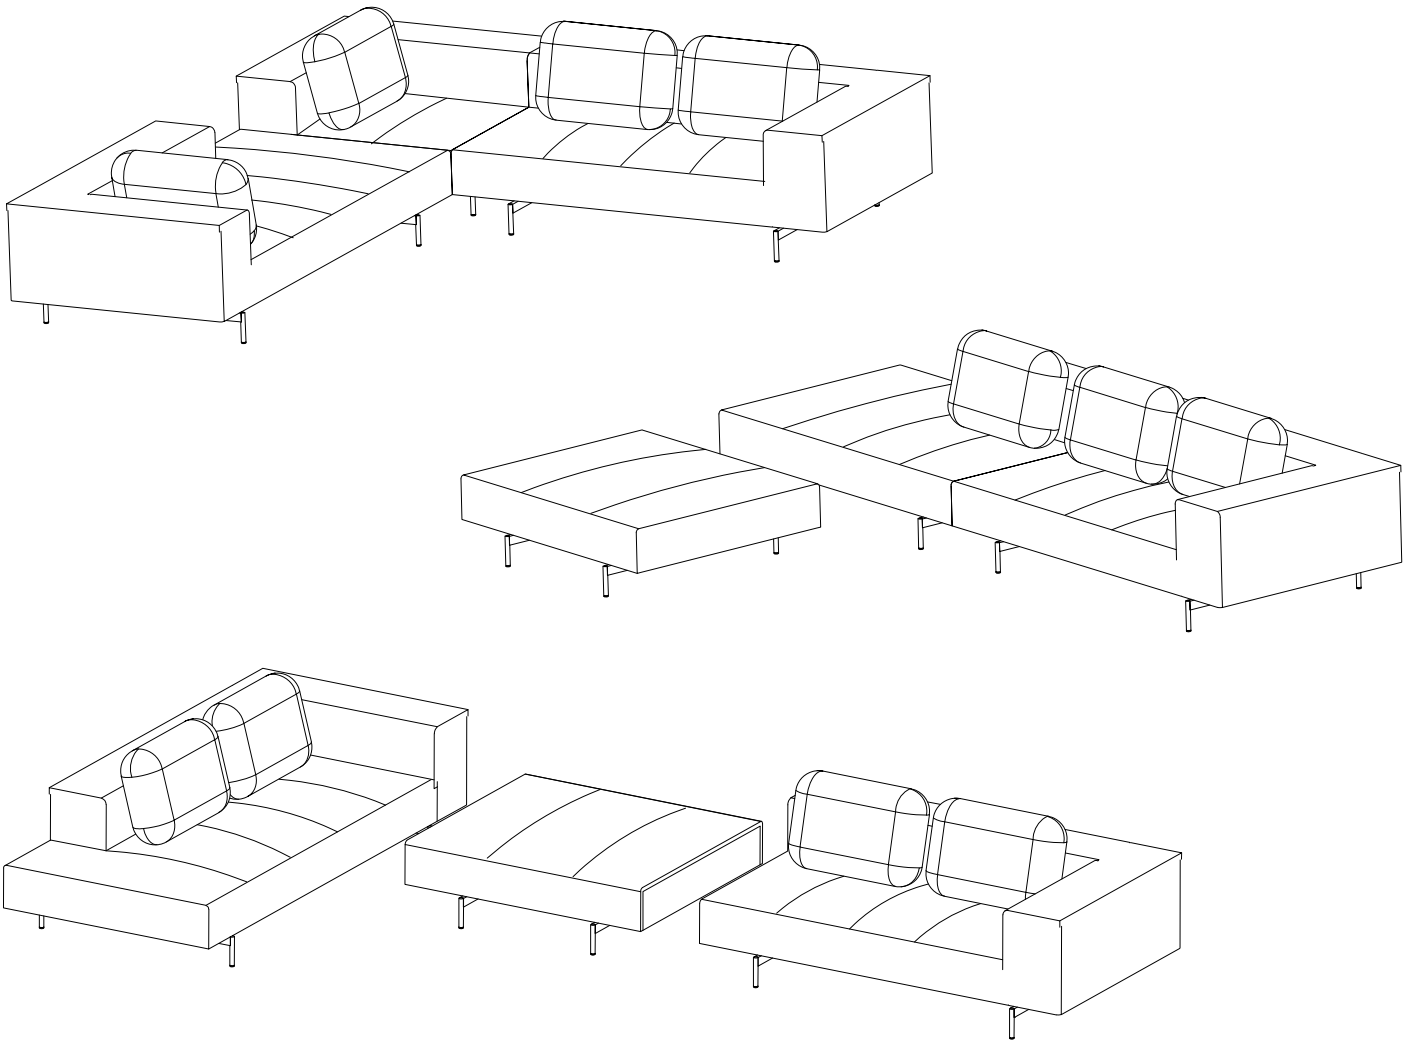

### Fittings

697000010

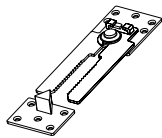

E x 2


Connector



F x 20

Woodscrew  
3,5x25 mm

697000011

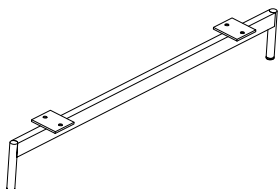


A x 2

Amsterdam leg




B x 8

Screw M8x60 mm



C x 1

Allen key 5 mm



D x 4

Black wooden block


# Amsterdam

Design by BoConcept



Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

## SOLO modules


0100

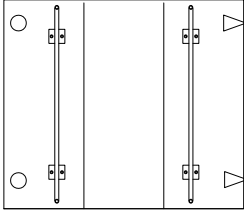


5000

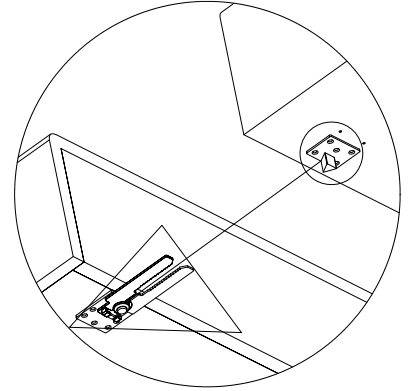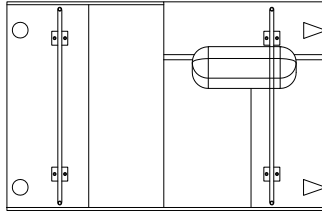


2502

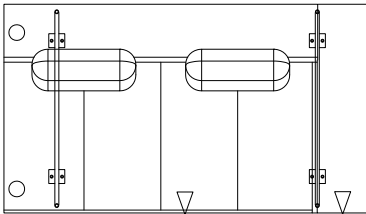


2503

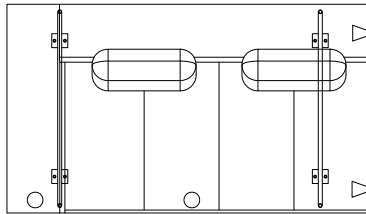


5500

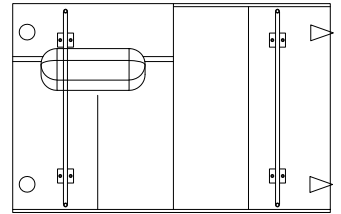


8000

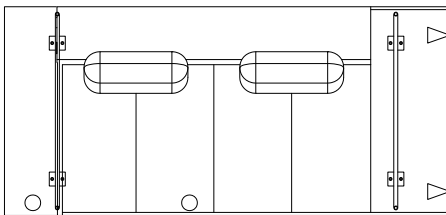


8500

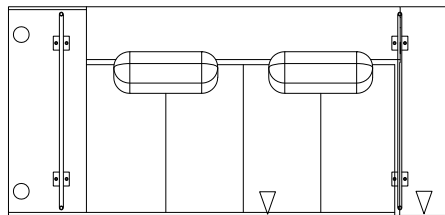


6000

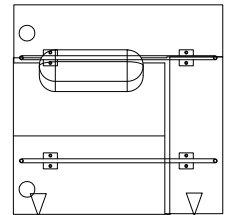


8100

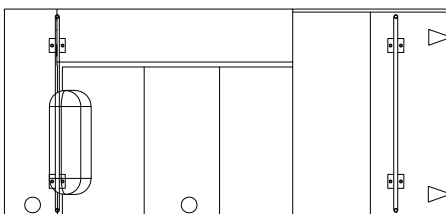

8600

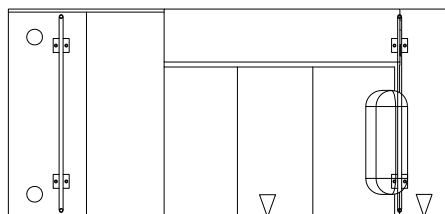

6500

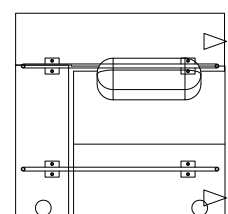


# Amsterdam


Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

Step 1:

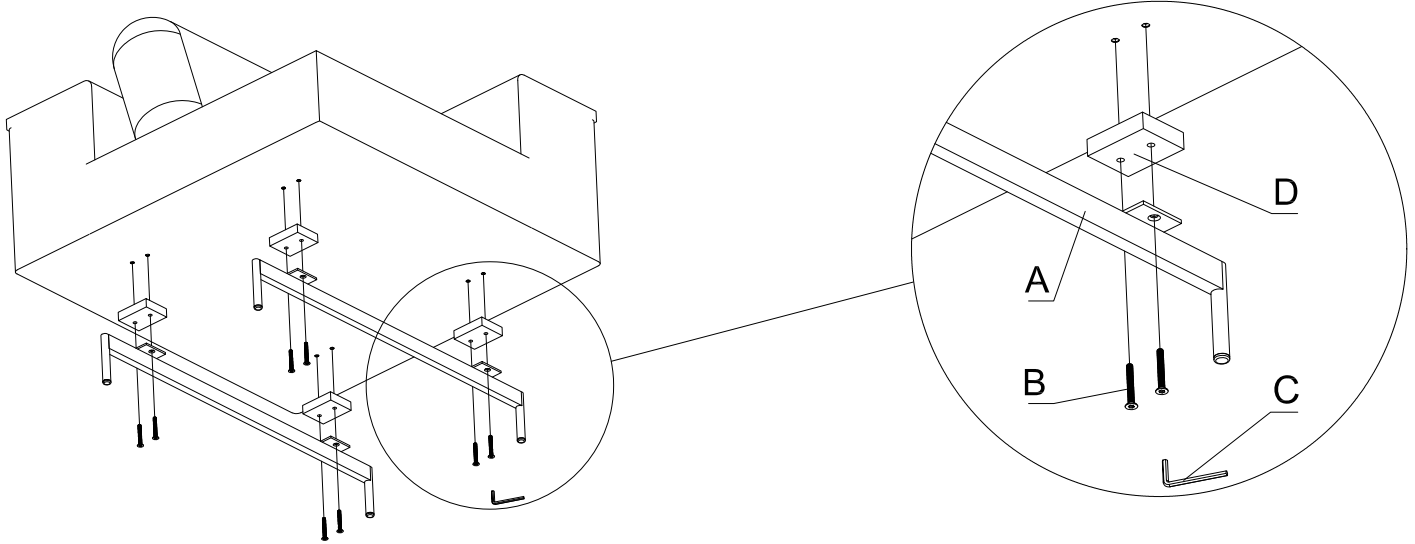

Step 2:

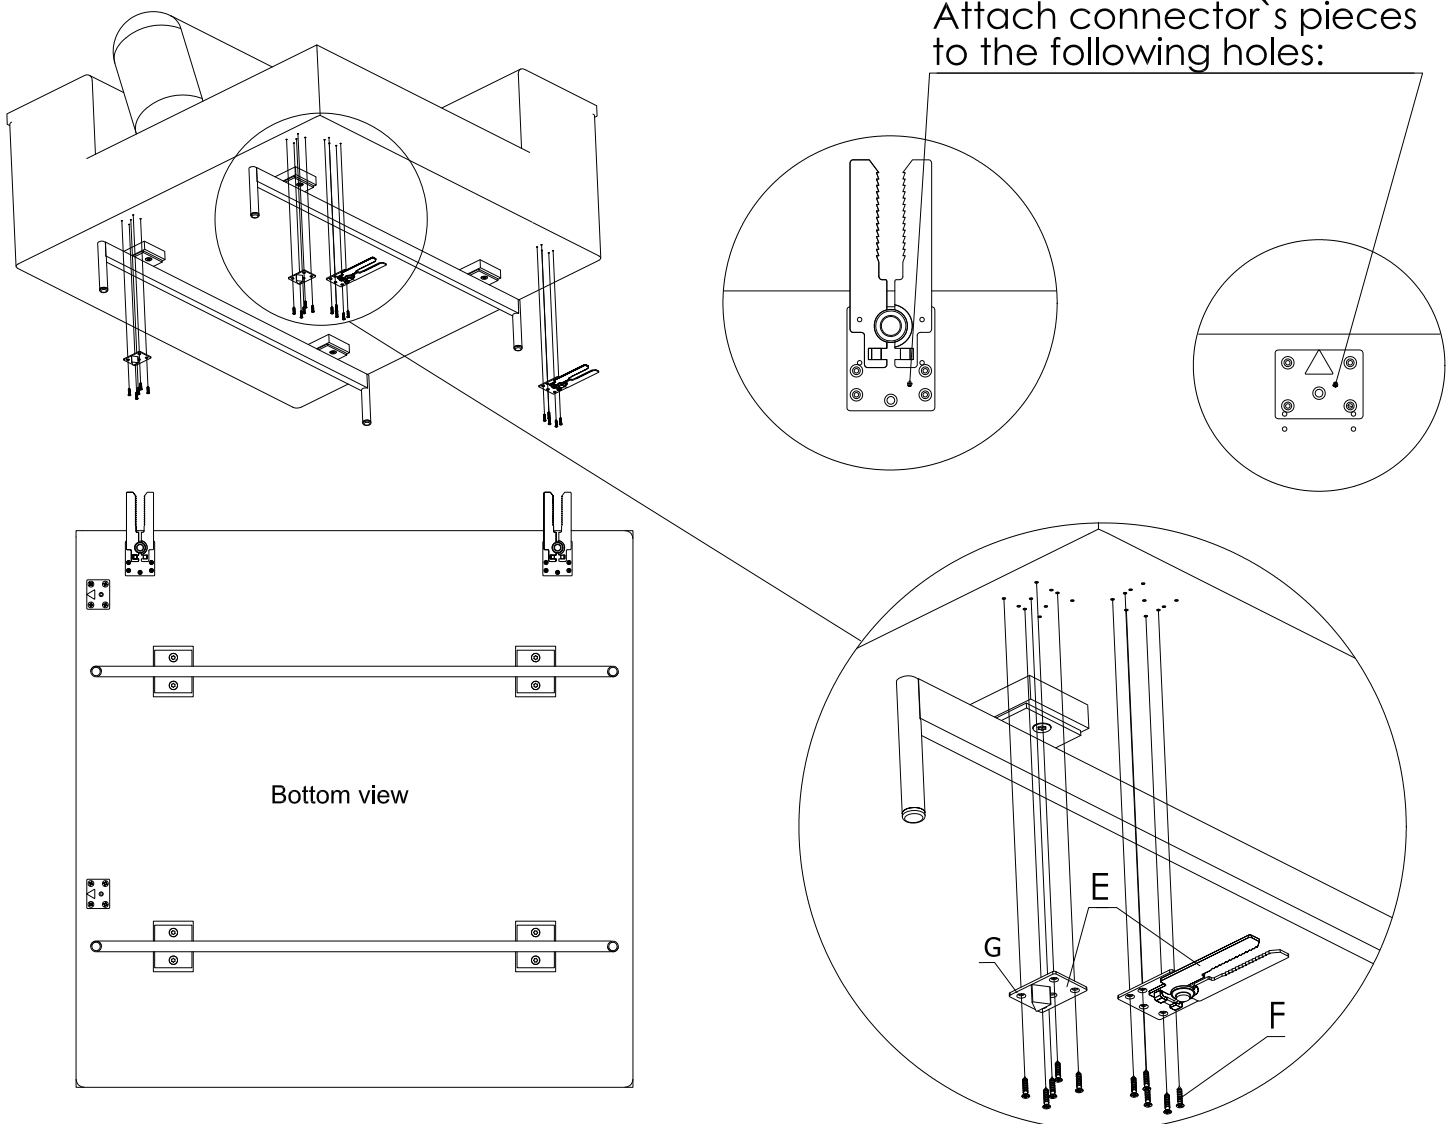


# Amsterdam

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

Step 3:

Top view

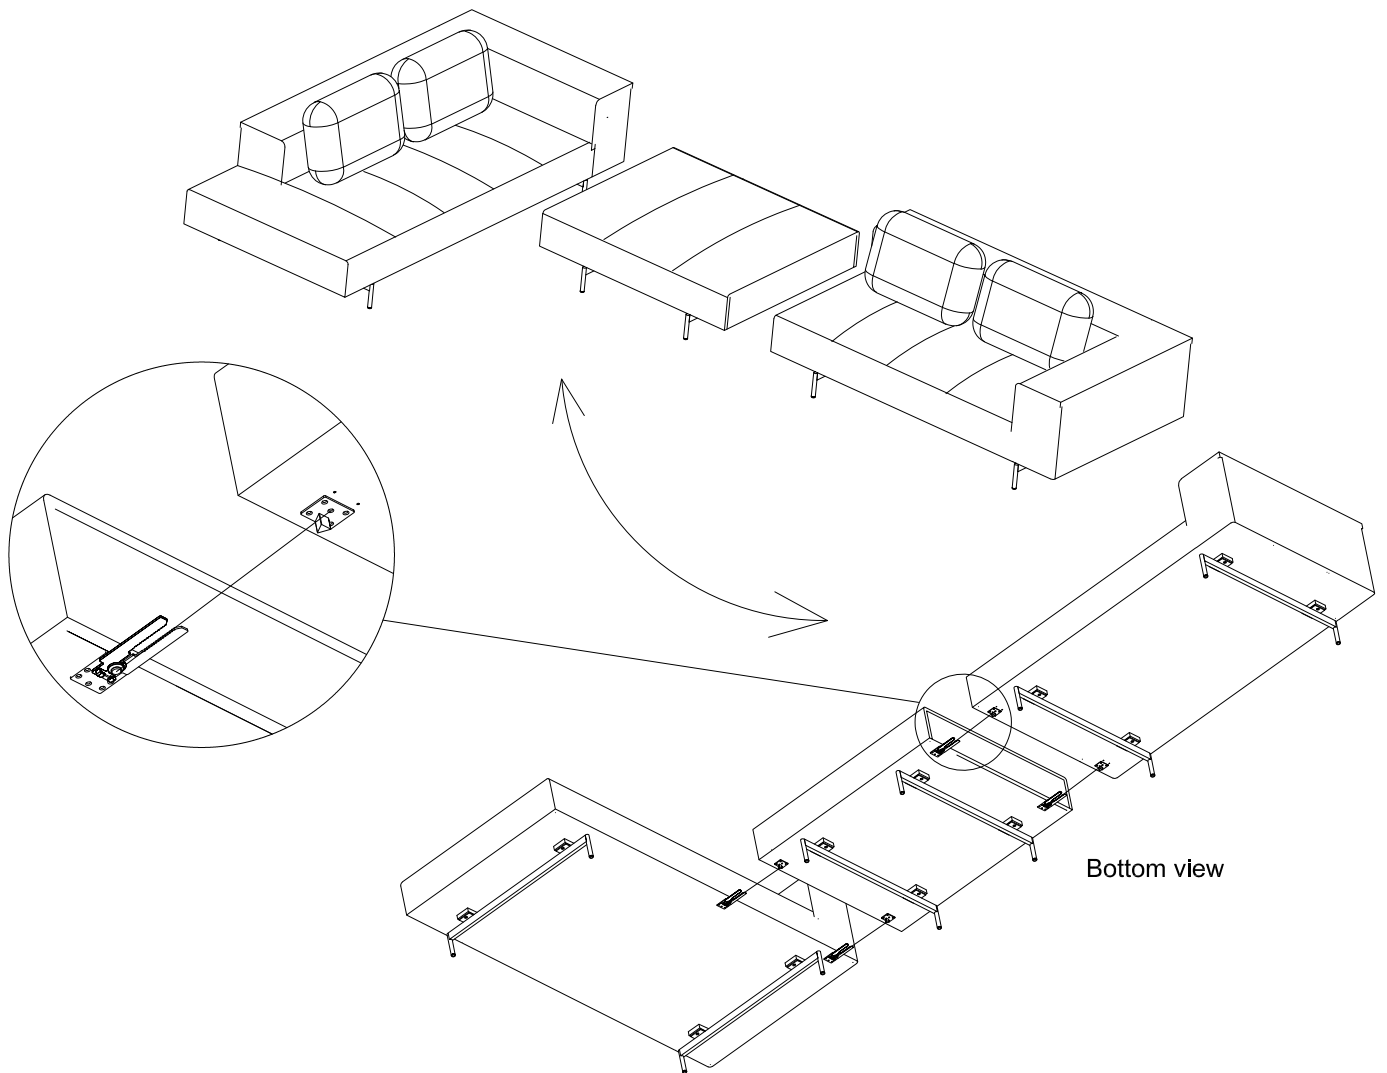

Bottom view