



# Bolzano

Design by BoConcept


Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

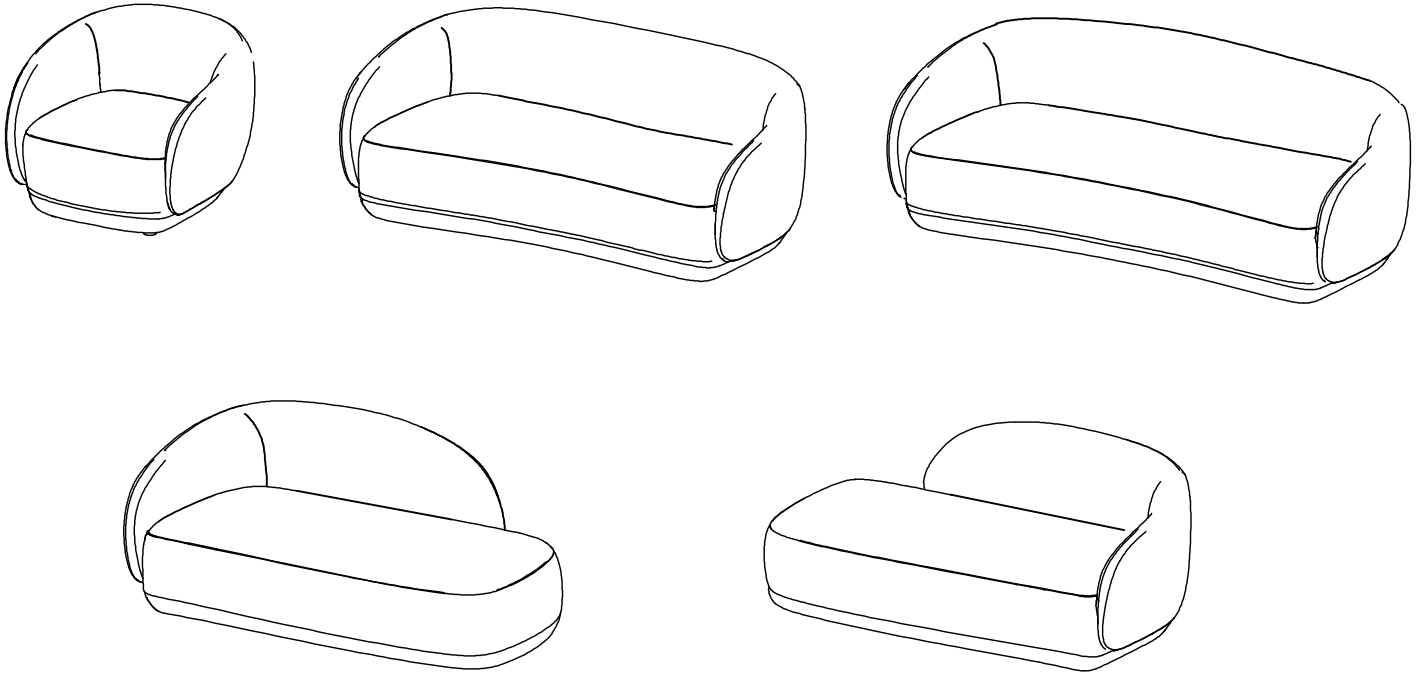

Værktøj - Werkzeuge - Tools - Outils



C X 1



Allen key  
D X 1



E X 1

spareparts bag 697000090



A X 4




B X 4

FIG.  
1

Attention: Transport plate needs to be unmounted before use.




C X 1 D X 1

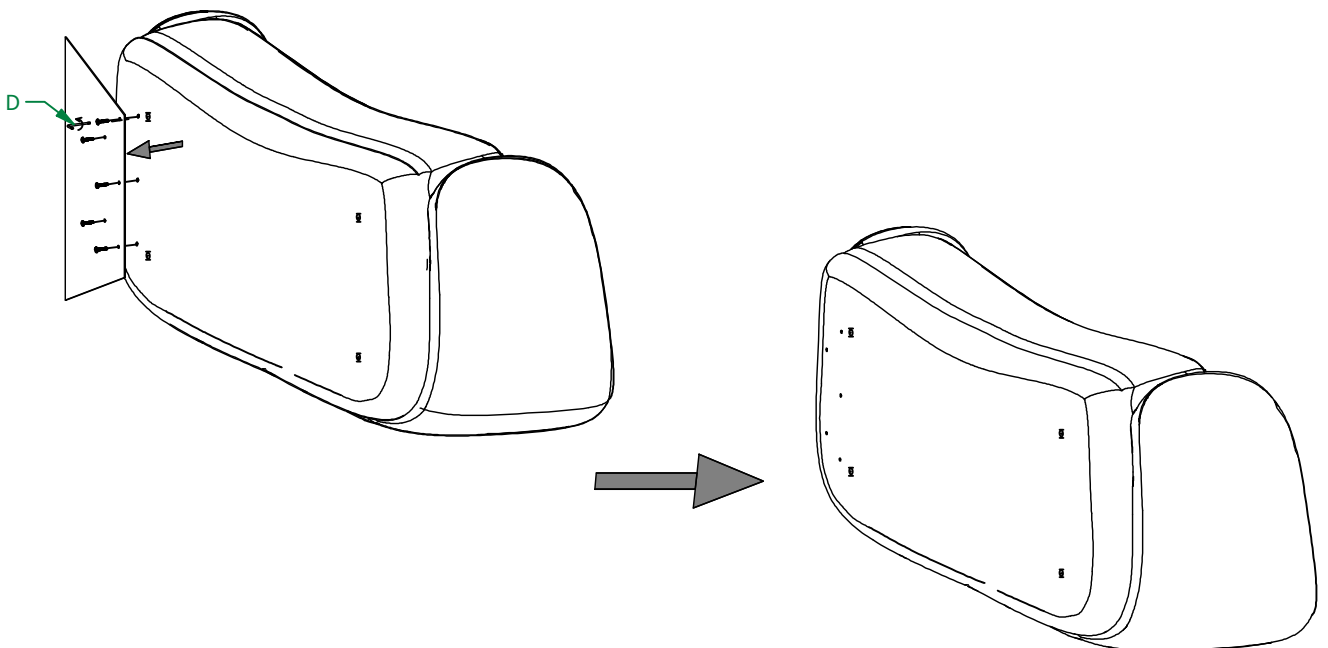




AX 4 BX 4 EX 1

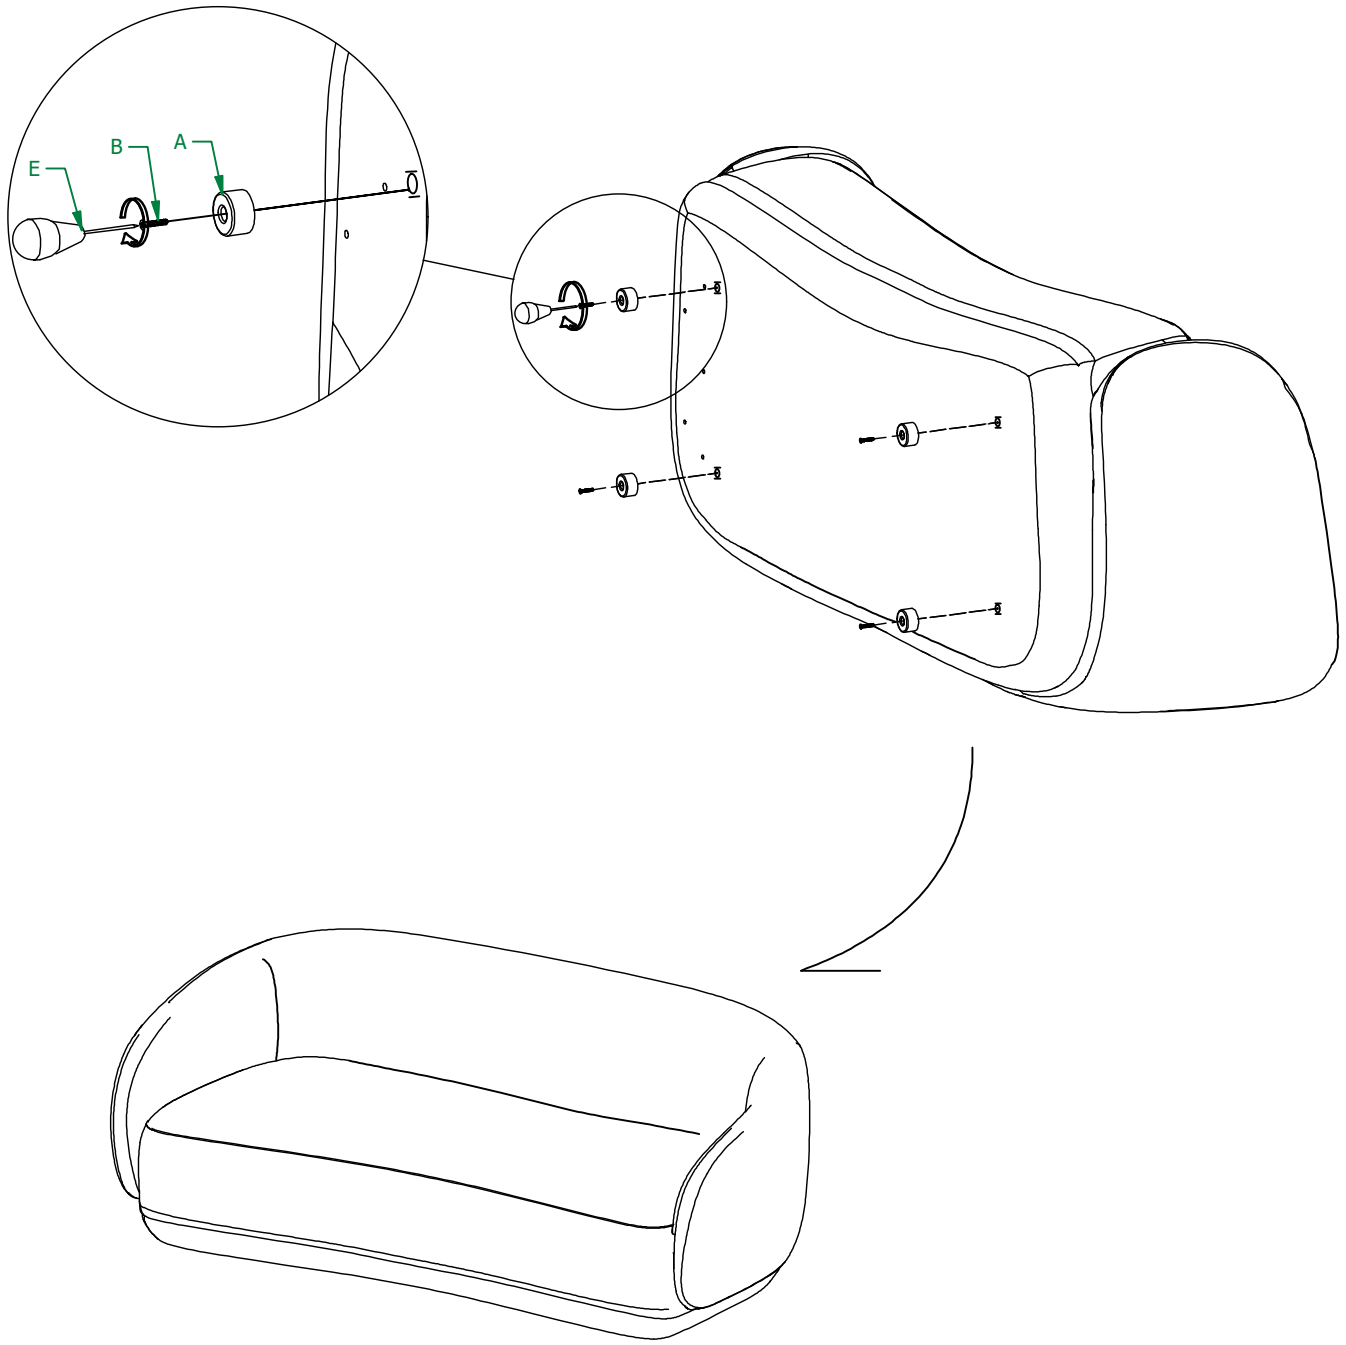

- DK Ved reklamation oplyses følgende:
- D Im Reklamationsfall, bitte folgendes erläutern:
- US In case of claims, please state the following:
- F En cas de réclamation, veuillez indiquer:
- NL Bij service volgense mededelen
- E En caso de reclamación, indicar lo siguiente:
- P No caso de reclamação, por favor indique o seguinte:
- JP

**Example!**

Korpus - Korpus - Carcase - Carcasse



Beslag - Fittings - Beschläge - Set de Montage

