

# Princeton

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

Eksempelkombinationer - Example combinations - Beispielkombinationen - Exemples d' combinaisons - Ejemplos de combinaciones



402-B020  
402-B021

87/67x46x54 Max 125kg.



402-B022  
402-B023


97/76,5x46x55 Max 125kg.

400-0230  
400-0240



1

402-0230  
402-0240



2

Beslag - Beschllge - Fittings - Set de montag  
Fitting bag 937000164



A x 4  
M6x15mm



B x 4  
D14 d6,5x1,5mm



C x 1  
4mm

FIG.  
1

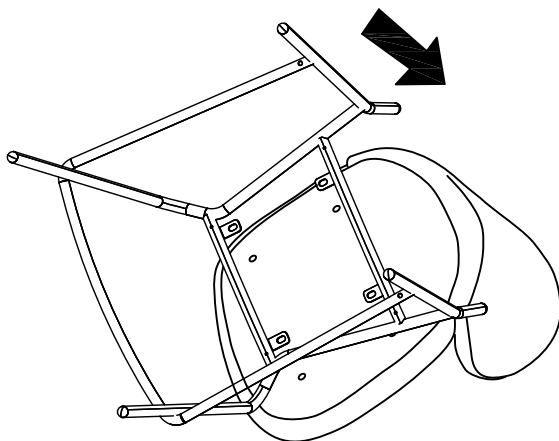


FIG.  
2

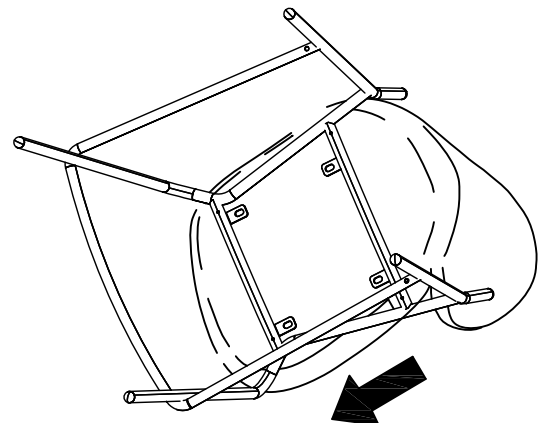





FIG.  
3

-  A x 2
-  B x 2
-  C x 1

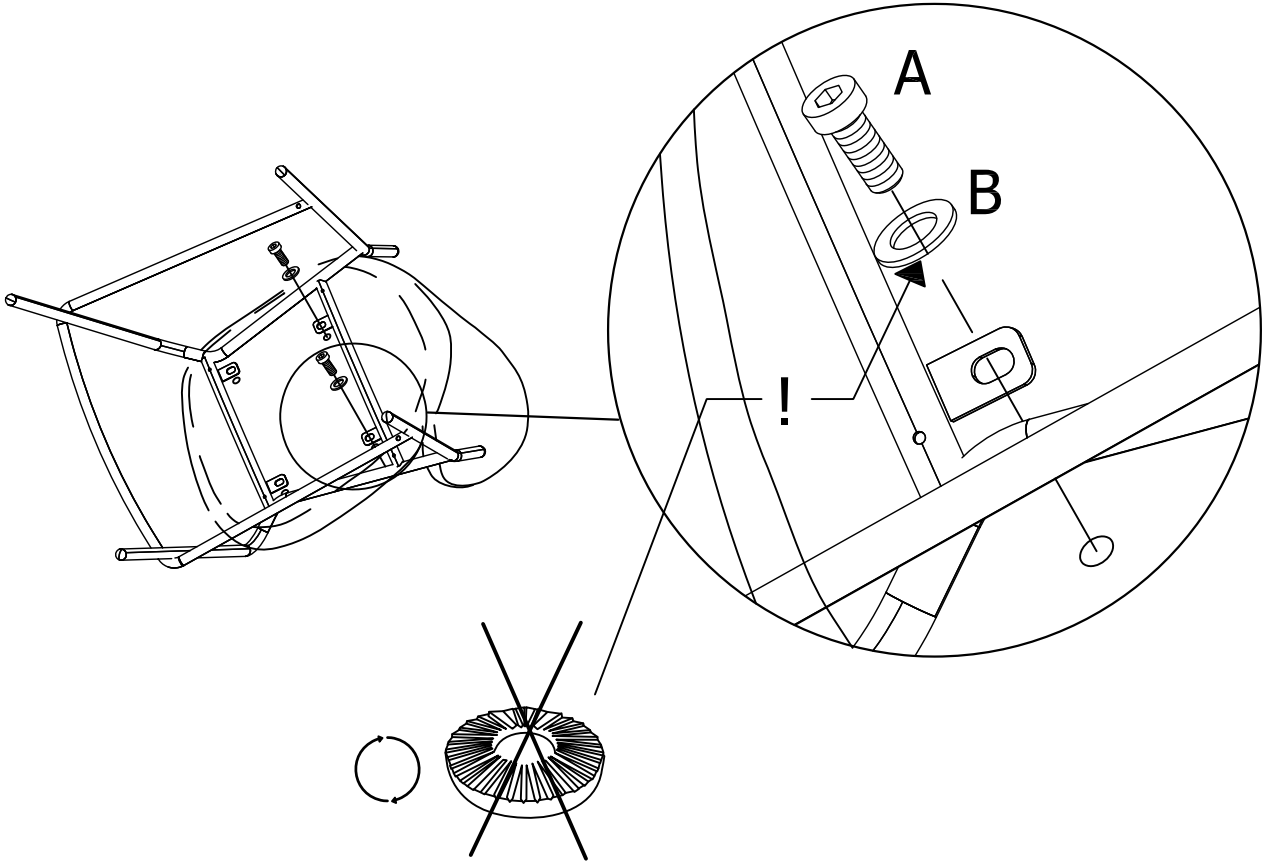





FIG.  
4

step 1

step 2

-  A x 2
-  B x 2
-  C x 1

