
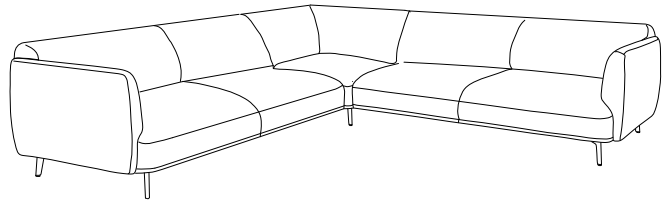
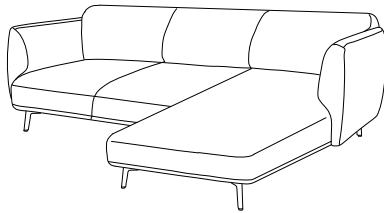
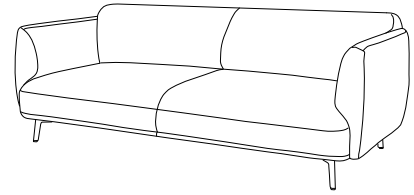
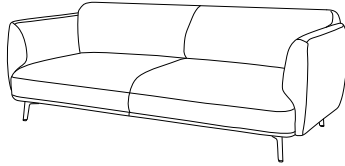


Modena


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

Eksempelkombinationer - Example combinations - Beispielkombinationen - Exemples d' combinaisons - Ejemplos de combinaciones

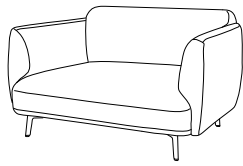


Monteringsstilbehør - Fittings - Montagezubehör - Raccords d'assemblage - Accesorios de montaje



A x 4



B x 8





D x 1
5mm

FIG.
1


instructions

Attention:


The legs of sofa is placed at the bottom of the sofa. Please open the zipper. You will find a set of sofa legs

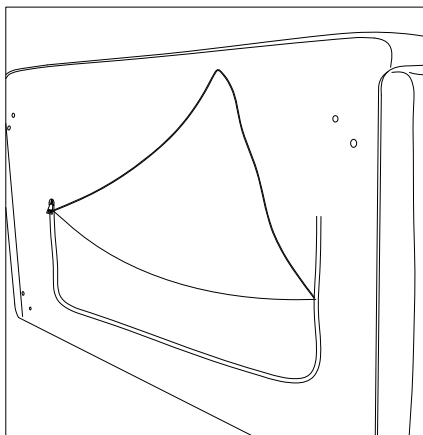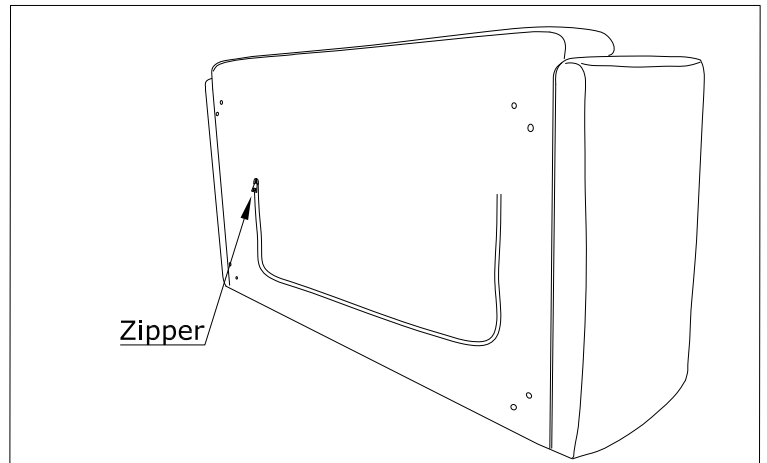

Step 1:
Open the zipper, legs inside

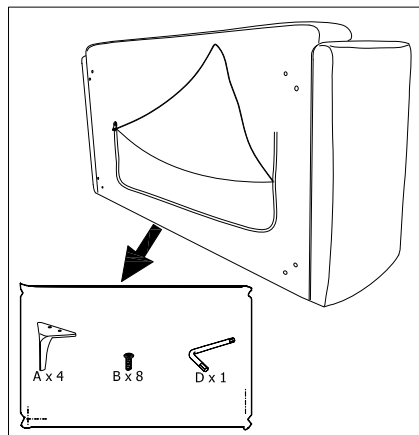

Step 2:
Take out the legs

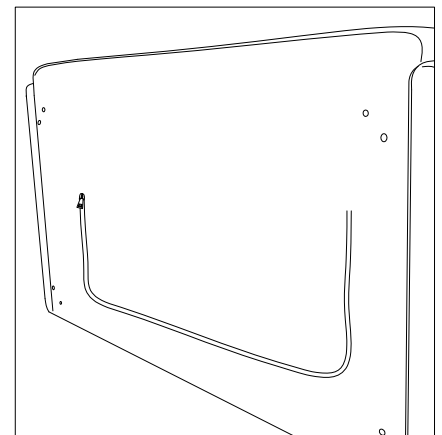

Step 3:
Close the zipper

FIG.
2



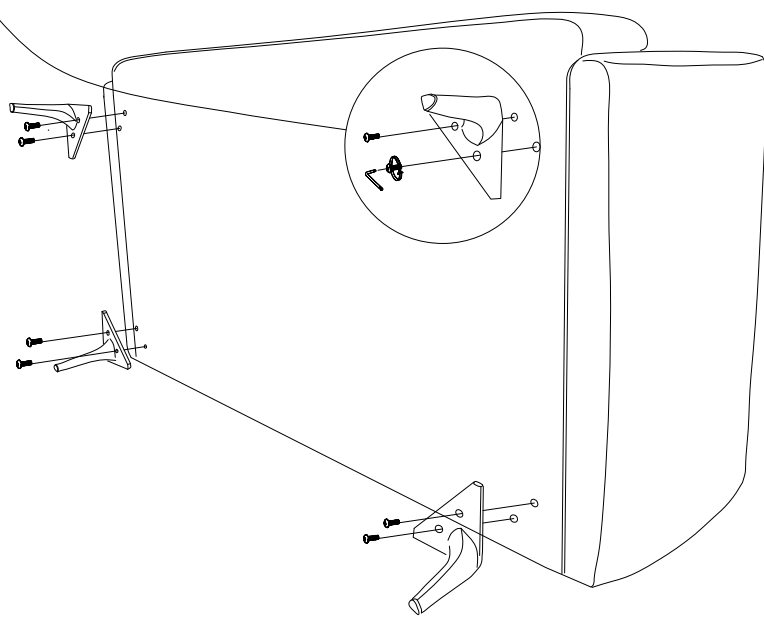


FIG.
3

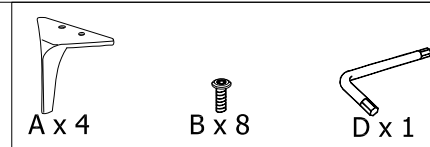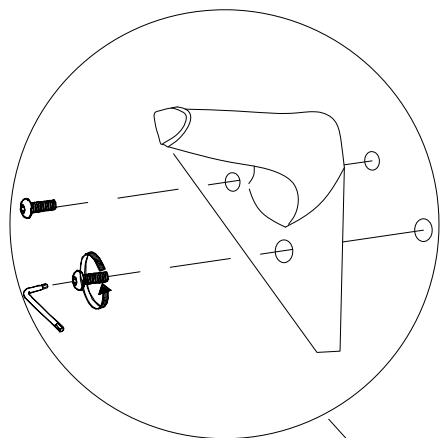